

WX 6200 ES [CONN]



Pramac portable generators range: prompt power assistance to light up, tackle site jobs and property improvement works. A complete range to choose from, for best solution to your remote power needs. When not fixing up around the job site, your Pramac portable generator can be used for emergency power during a power outage.

FEATURES

- OHV engine provides consistent power for multiple applications
- Fuel: Petrol
- Starting Systems: Electric (with battery)
- Low-oil level shutdown automatically safeguards engine from damage
- Engine oil for the first startup supplied in a bottle
- Digital multi meter tracks engine runtime for maintenance intervals
- Fuel gauge allows user to track gasoline levels
- Practical quick user's Starting Instruction (decal)
- AVR Automatic Voltage Regulator
- Kit wheels integrated for easy transportation
- CONNector for AMF
- Optional: Automatic Main Failure (AMF)



Desempenho

Frequência	Hz	50
Tensão	V	230
Nº de fases		1
Potência Máxima	Watts	5800
Potência Contínua	Watts	5300



Motor

Marca		Pramac
Tipo		OHV
Emissões de Escape Otimizado 50Hz (COM)		Stage V
Velocidade Nominal de Operação	rpm	3000
Combustível		Gasolina
Sistema de partida		Elétrico (+Recoil)
Capacidade de Óleo	l	1.1
Óleo de Guarda		√




Alternador

Sistema de regulação de Tensão		AVR
--------------------------------	--	-----

Dados dimensionais

Comprimento	(L) mm	800
Largura	(W) mm	698
Altura	(H) mm	620
Peso Seco	Kg	89
Dimensão da Caixa CxLxA	mm	810x625x607

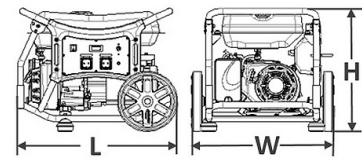

Autonomia

Capacidade do Tanque de Combustível		26
Consumo de Combustível 50%	l/h	2.17
Tempo de Operação 50%	h	12



Nível de Ruído

Nível de Ruído Garantido (PTN)	dBA	97
--------------------------------	-----	----

GENSET CONTROL PANELS

Mounted on the genset and complete of: instrumentation, control, protection of the generating set and sockets.

COMMANDS

- Start selector switch with key: OFF - ON - START
- Selector switch for external control connector (AMF)
- Choke Lever

INSTRUMENTATION

- Voltmeter
- Frequency meter
- Hourmeter
- Fuel gauge

PROTECTIONS

- Thermal Magnetic protection
- Oil Guard

OUTLET:

- CONNector for AMF

TOMADAS

SCHUKO 230V 16A IP44		2
2P+T CEE 230V 32A IP44		1



ACCESSORIES CONTROL PANEL

ATS - Automatic Transfer Switch

With the Powermate Automatic Transfer Switch, you can easily connect your generator to the power grid and continue to supply your domestic appliances in case of a power outage.

Equipment:

- Control unit
- Contactor with interblock
- Selector Switch: AUTO / MANUAL
Manual option it is used to decouple the machine from the generator.
The generator can start independently from the panel.
- Emergency Botton: Stop the generator once pressed.
- Battery charged
- 5 meters control wiring (with connector)



Status indicators:

- Utility Power lamp: Detects the external grid.
- Generator lamp: The load switch to the generator the warning light turns on.
- Load lamp: ATS is powered by the load,
it comes from the grid or from the generator.
- Battery lamp: It keeps charged the generator starter Battery,
so it is always ready to go.
- Failure lamp: Indication of anomalies. The generator fails to start.

It is strongly recommended that your ATS need to be installed by a professional.

DIMENSIONS PANEL

Largura	(W) mm	410
Altura	(H) mm	310
Profundidade	(D) mm	180
Peso	Kg	7

